



DSX Access Systems, Inc.

DSX-LAN-D

Field Updating / Defaulting - the DSX-LAN-D and DSX-IP-HUB



Use the following steps to Flash update the LAN-D and IP-HUB. Connect the module to 5 or 12VDC. If using a DSX-USB module use the RS-485 from the USB Module to the RS-485 port of the LAN-D or IP-HUB. Be sure and cross the transmit and receive terminals. TX+ to RX+ and TX- to RX- Copy the update file - "DSX_Firmware_Application_V#.#.exe" to the WinDSX folder on your PC and right click and select Run as Administrator.

1. Click on the **Serial Port** selection box and select the port to be used. This port number can be found in the Windows Device Manager.

2. Click on **Connect**

3. Using a paper clip momentarily press the reset button on the side of the unit




4. When the Update button becomes live Click on **Update to LAN-D/IP-HUB**



Note!!! Device Factory Reset will wipe out the configuration and set the unit back to factory defaults. This can optionally be done without Flashing the unit or after flashing the unit but is not required.

5. Once the update is Successful - Click on Ok for the acknowledgement.

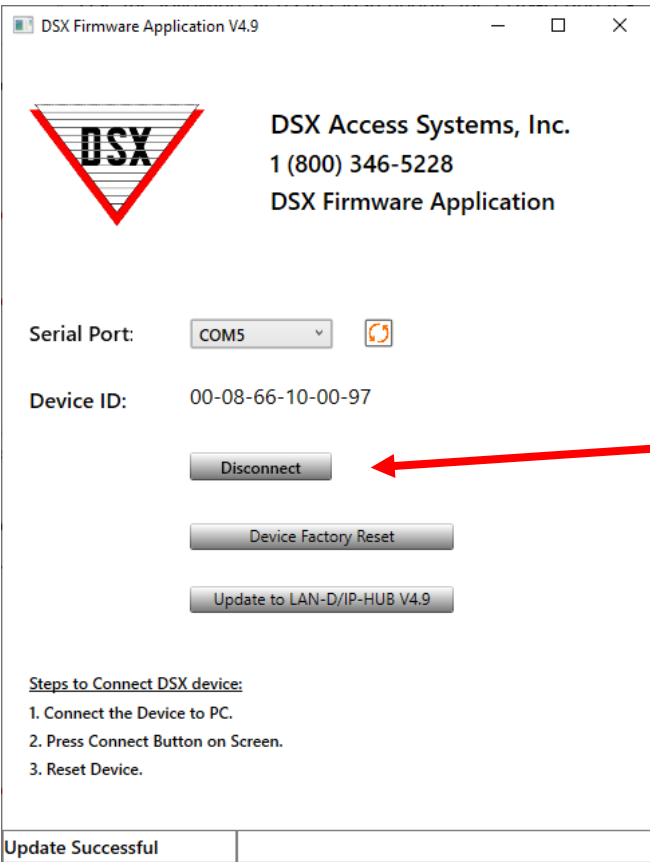

6. Click on Disconnect. Once the Heartbeat returns the module is ready.

Note!!! If you perform **Device Factory Reset** the unit defaults back to 192.168.1.25 and the User Name is master and the password is master.