



DSX Access Systems, Inc.

DSX Enrollment Reader



- **USB Connected**
- **125KHz or 13.5MHz Versions**
- **Formatted for DSX**
- **Inserts Card Number in Code field**
- **Allows for quick and consistent entry of card numbers**
- **LED flashes and beeps when card is read**

DSX Enrollment Reader

Size

4.2"W x 2.5"H x .875"D

Weight

.45lbs

Power Requirements

USB

Warranty

Limited 1 Year

Frequency

13.56 MHZ -or-125KHz

Dual Frequency is available

Compliance

FCC, RoHS

Enrollment Reader

This USB reader is preprogrammed by DSX to properly read the card number and insert the proper data into the DSX database.

Requirements

Connect the USB enrollment reader to an available USB port on the PC that will be entering the card numbers in to the DSX software.

Enrollment Process

Add or Edit a card holder. Advance to the Card screen and click on the Code field.

Once the cursor is in the Code field – Present the Card to the Reader.

The screenshot shows a software window titled "New Cardholder New Card". It has a blue header bar and a light beige background. At the top, there are three tabs: "Cards", "Access Level", and "Linking Level". The "Cards" tab is selected. The main area contains several input fields and controls. On the left, there is a "Code #" field with a dropdown arrow, an "Imprinted Card #" field, a "Start Date:" field with a dropdown arrow showing "09/28/2010", a "Start Time:" field with a dropdown arrow showing "12:00:00 AM", a "Guard Tour:" checkbox, and a "Status:" checkbox which is checked. On the right, there is a "P.I.N. #" field, a "# of Uses Allowed:" field showing "9999", a "Stop Date:" field with a dropdown arrow showing "12/31/9999", a "Stop Time:" field with a dropdown arrow showing "12:00:00 AM", and an "Override Anti-Passback:" checkbox. Below these, there is a "Date Last Used:" field showing "01/01/1000" and an "Anti-PassBack Status:" section with buttons for "N", "Z1", "Z2", "Z3", and "Z4". A "Last Used At:" field shows "Loc: 1 0". At the bottom, there is a "Notes:" text area. At the very bottom of the window are four buttons: "Previous", "Next", "Cancel", and "OK".

Once the Card is presented and the number is displayed in the Code Field Click OK to Save.