




®

**DSX Access Systems, Inc.**


## **DSX-Drug Test Selector**

### **DSX-Drug Test Random Card Holder Selector**

DSX can assist in the random selection process of Card Holders to be drug tested. This DSX Drug Test utility program can be used to deactivate random card holders. Without any control or knowledge of who will be selected the User simply selects a location and enters the number of people to be chosen. That same number of Card Holders will have their Card immediately Deactivated.

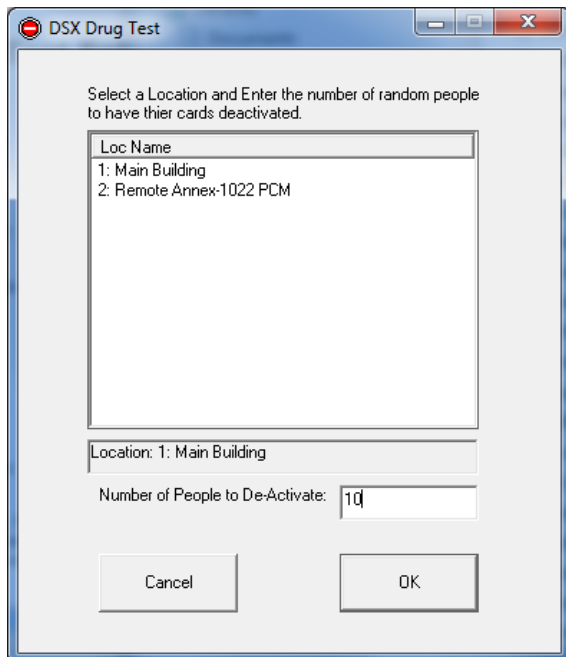


Using the program is quite simple and secure. The program is copied into the WinDSX folder on the PC where it is to be used. Start the program and you will be prompted to enter a User Name and Password. The password is case sensitive and the operator will need card edit privileges in their password profile. When finished the OK button says Done and you will need to Click OK on the acknowledgement box and then click on Cancel to close the program.

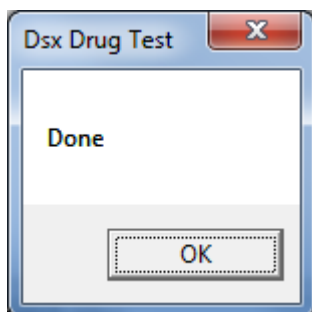

To reactivate a Card Holder simply edit the card record and change the deactivate date field to a future date and save the card.

There is no obvious indication of who will be or was selected. There is a record that the program was run in the form of a text file written into the errors folder. This file will show the Operator that ran the program, time and date it ran and the number of Card Holders selected.

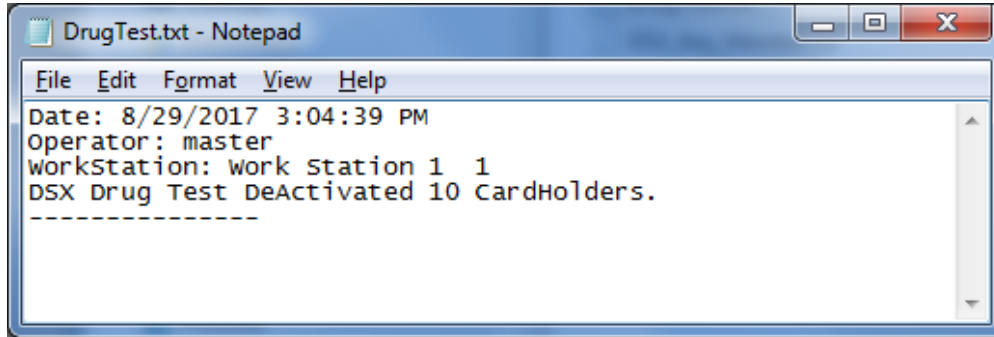

```
File Edit Format View Help
Date: 8/29/2017 3:04:39 PM
Operator: master
WorkStation: work station 1 1
DSX Drug Test DeActivated 10 CardHolders.
-----
```